

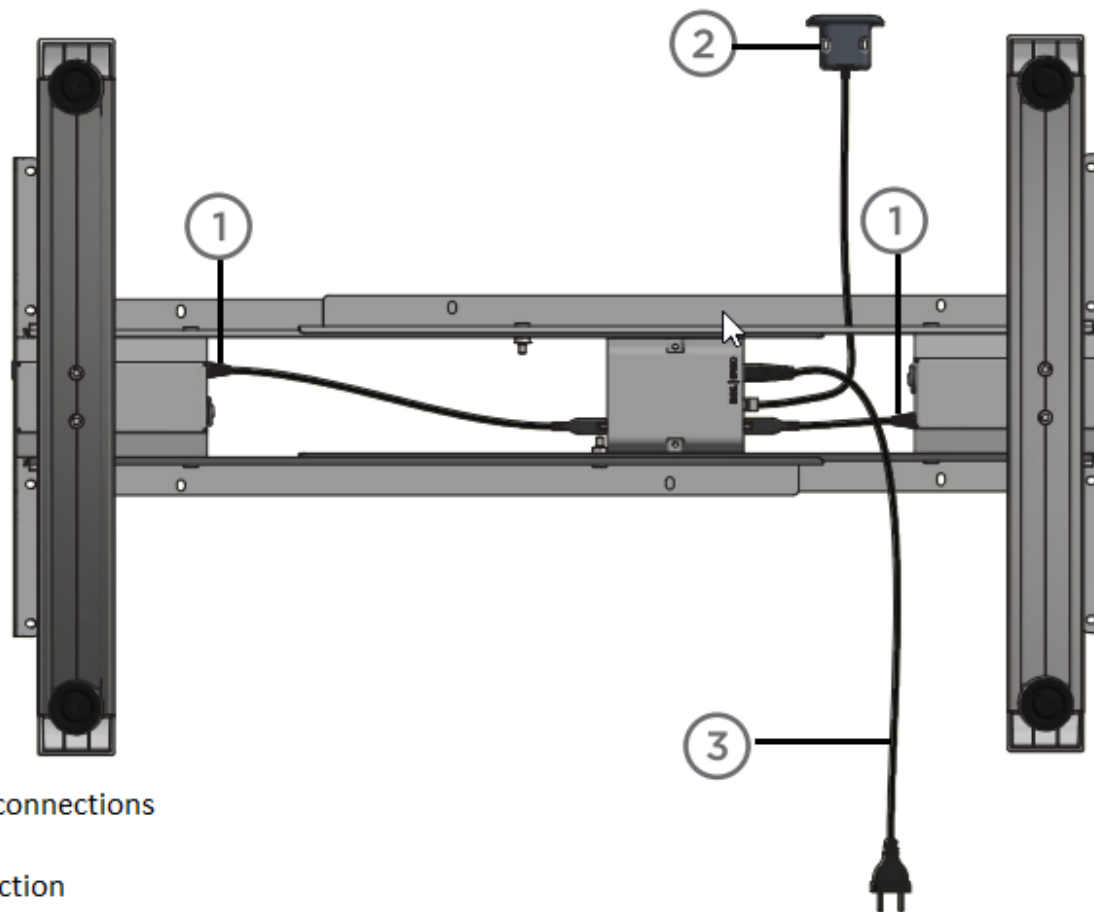


## Height-adjustable desks problems and possible solutions

**\*If after the reset, the fault has not disappeared try to repeat reset 1 3 more times and only then contact our support**

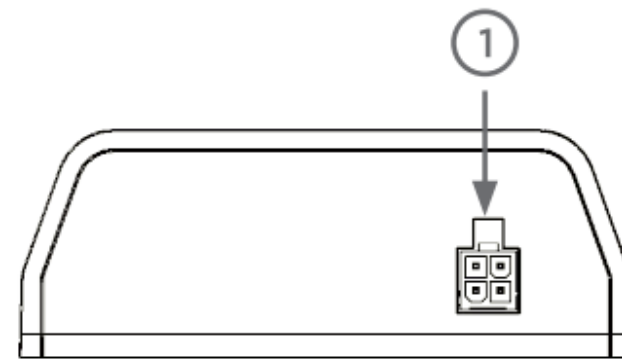

## Wires set up instruction

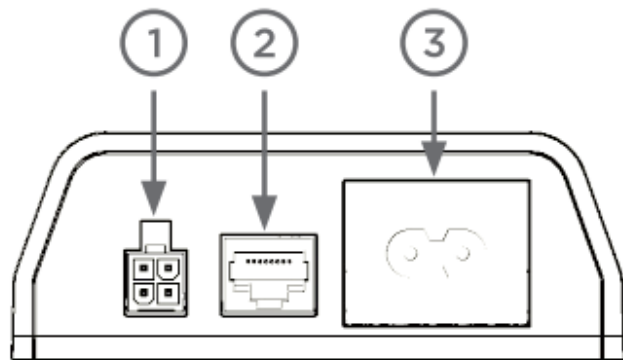

- ① "4 pin" motor connections
- ② Handset connection
- ③ Power cord connection

### UNIKA ERGO reset instruction



Simultaneously press the up and down buttons, hold it for 8 seconds




Hold down button until desk reach lowest point possible



The desk is ready for normal use

### UNIKA LINAK reset instruction

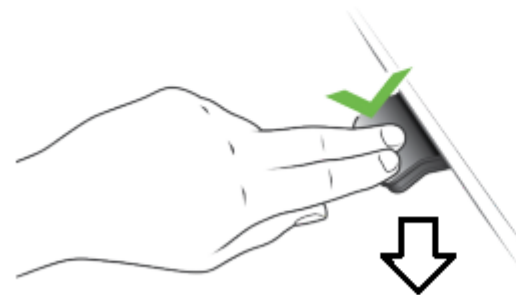

Hold down button on desk panel to ensure the desk is retracted to its lowest limit

Press and hold down button for 5 seconds, wait until all desk movement has stopped, then release. If initialization is successful, you should see a slight down/up movement of the desk legs



The desk is ready for normal use