

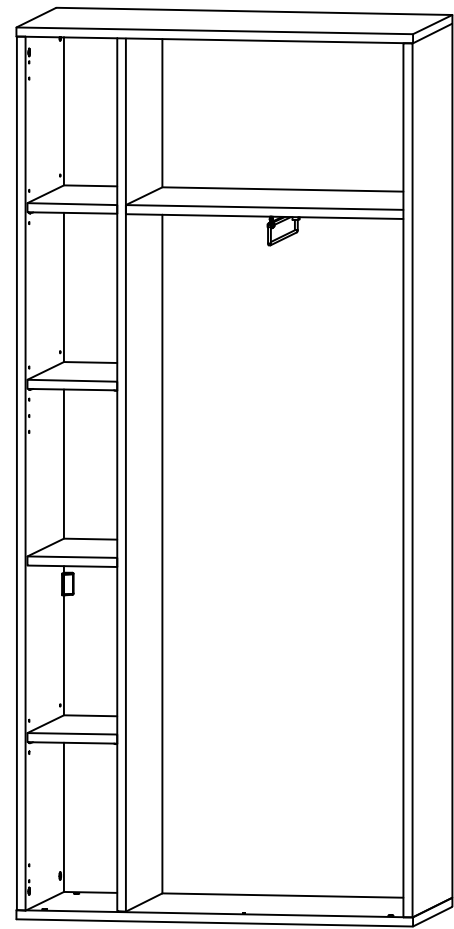
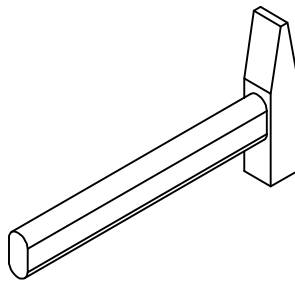
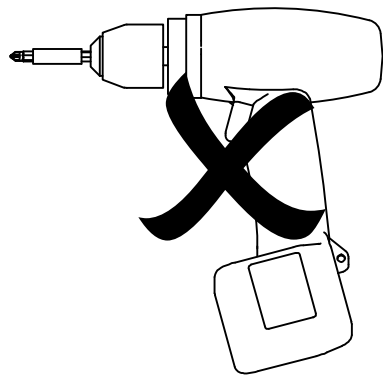
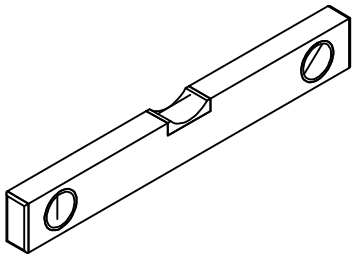
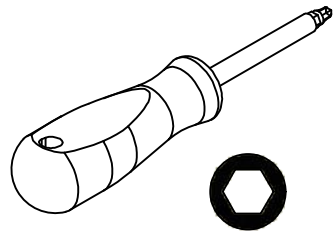


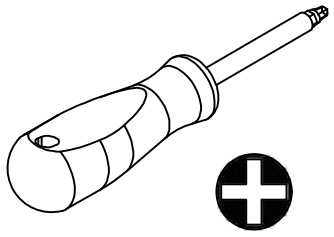


B011C01XX

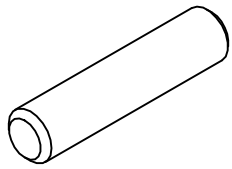


X12

B013A09XX

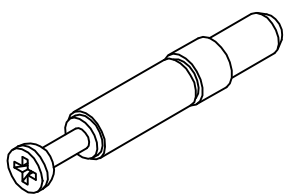


X12

B012A04XX

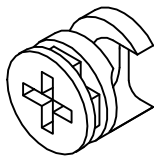


X12

B082B03**



X16

B013A0801




X8

B071A1704




X12

B091B05**

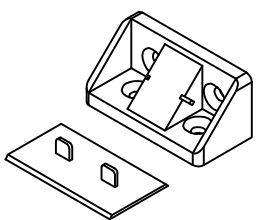


X2

B021A0901




X12

B161H0201


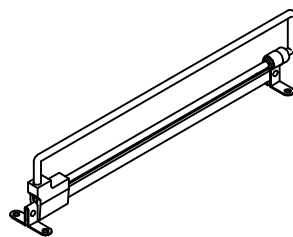



X1






B07AN15XX


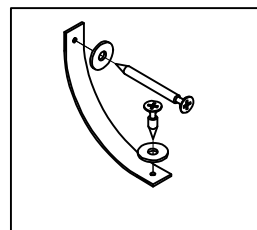










X1

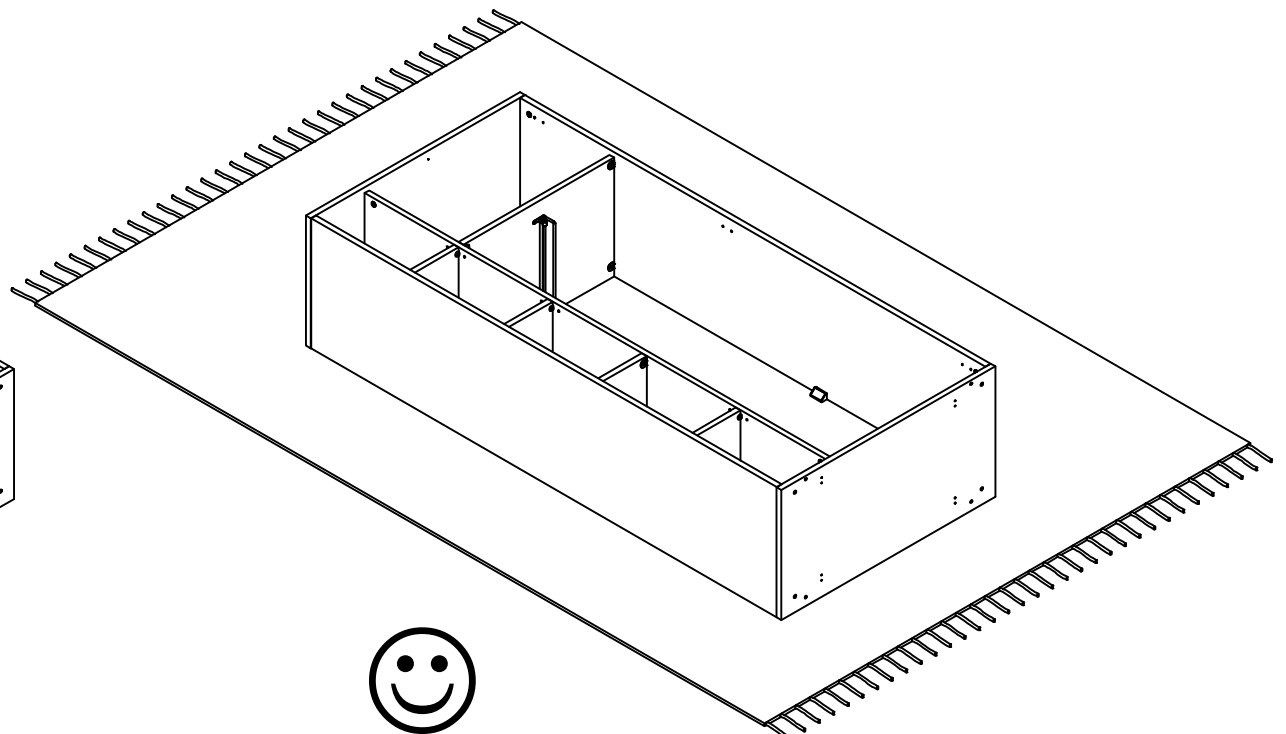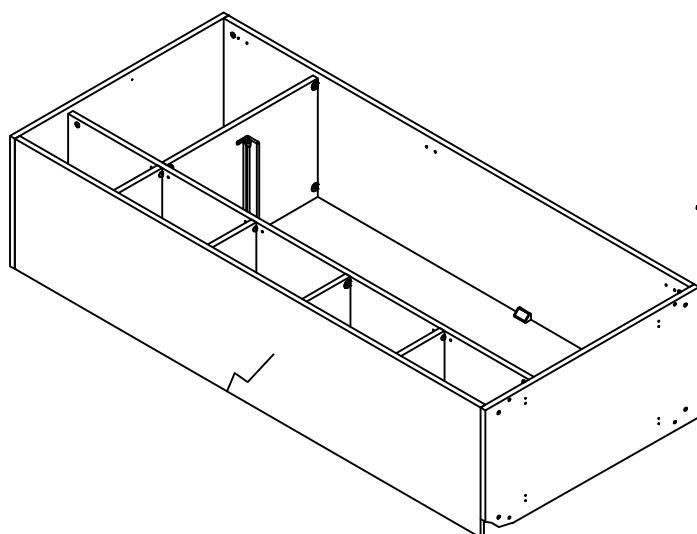


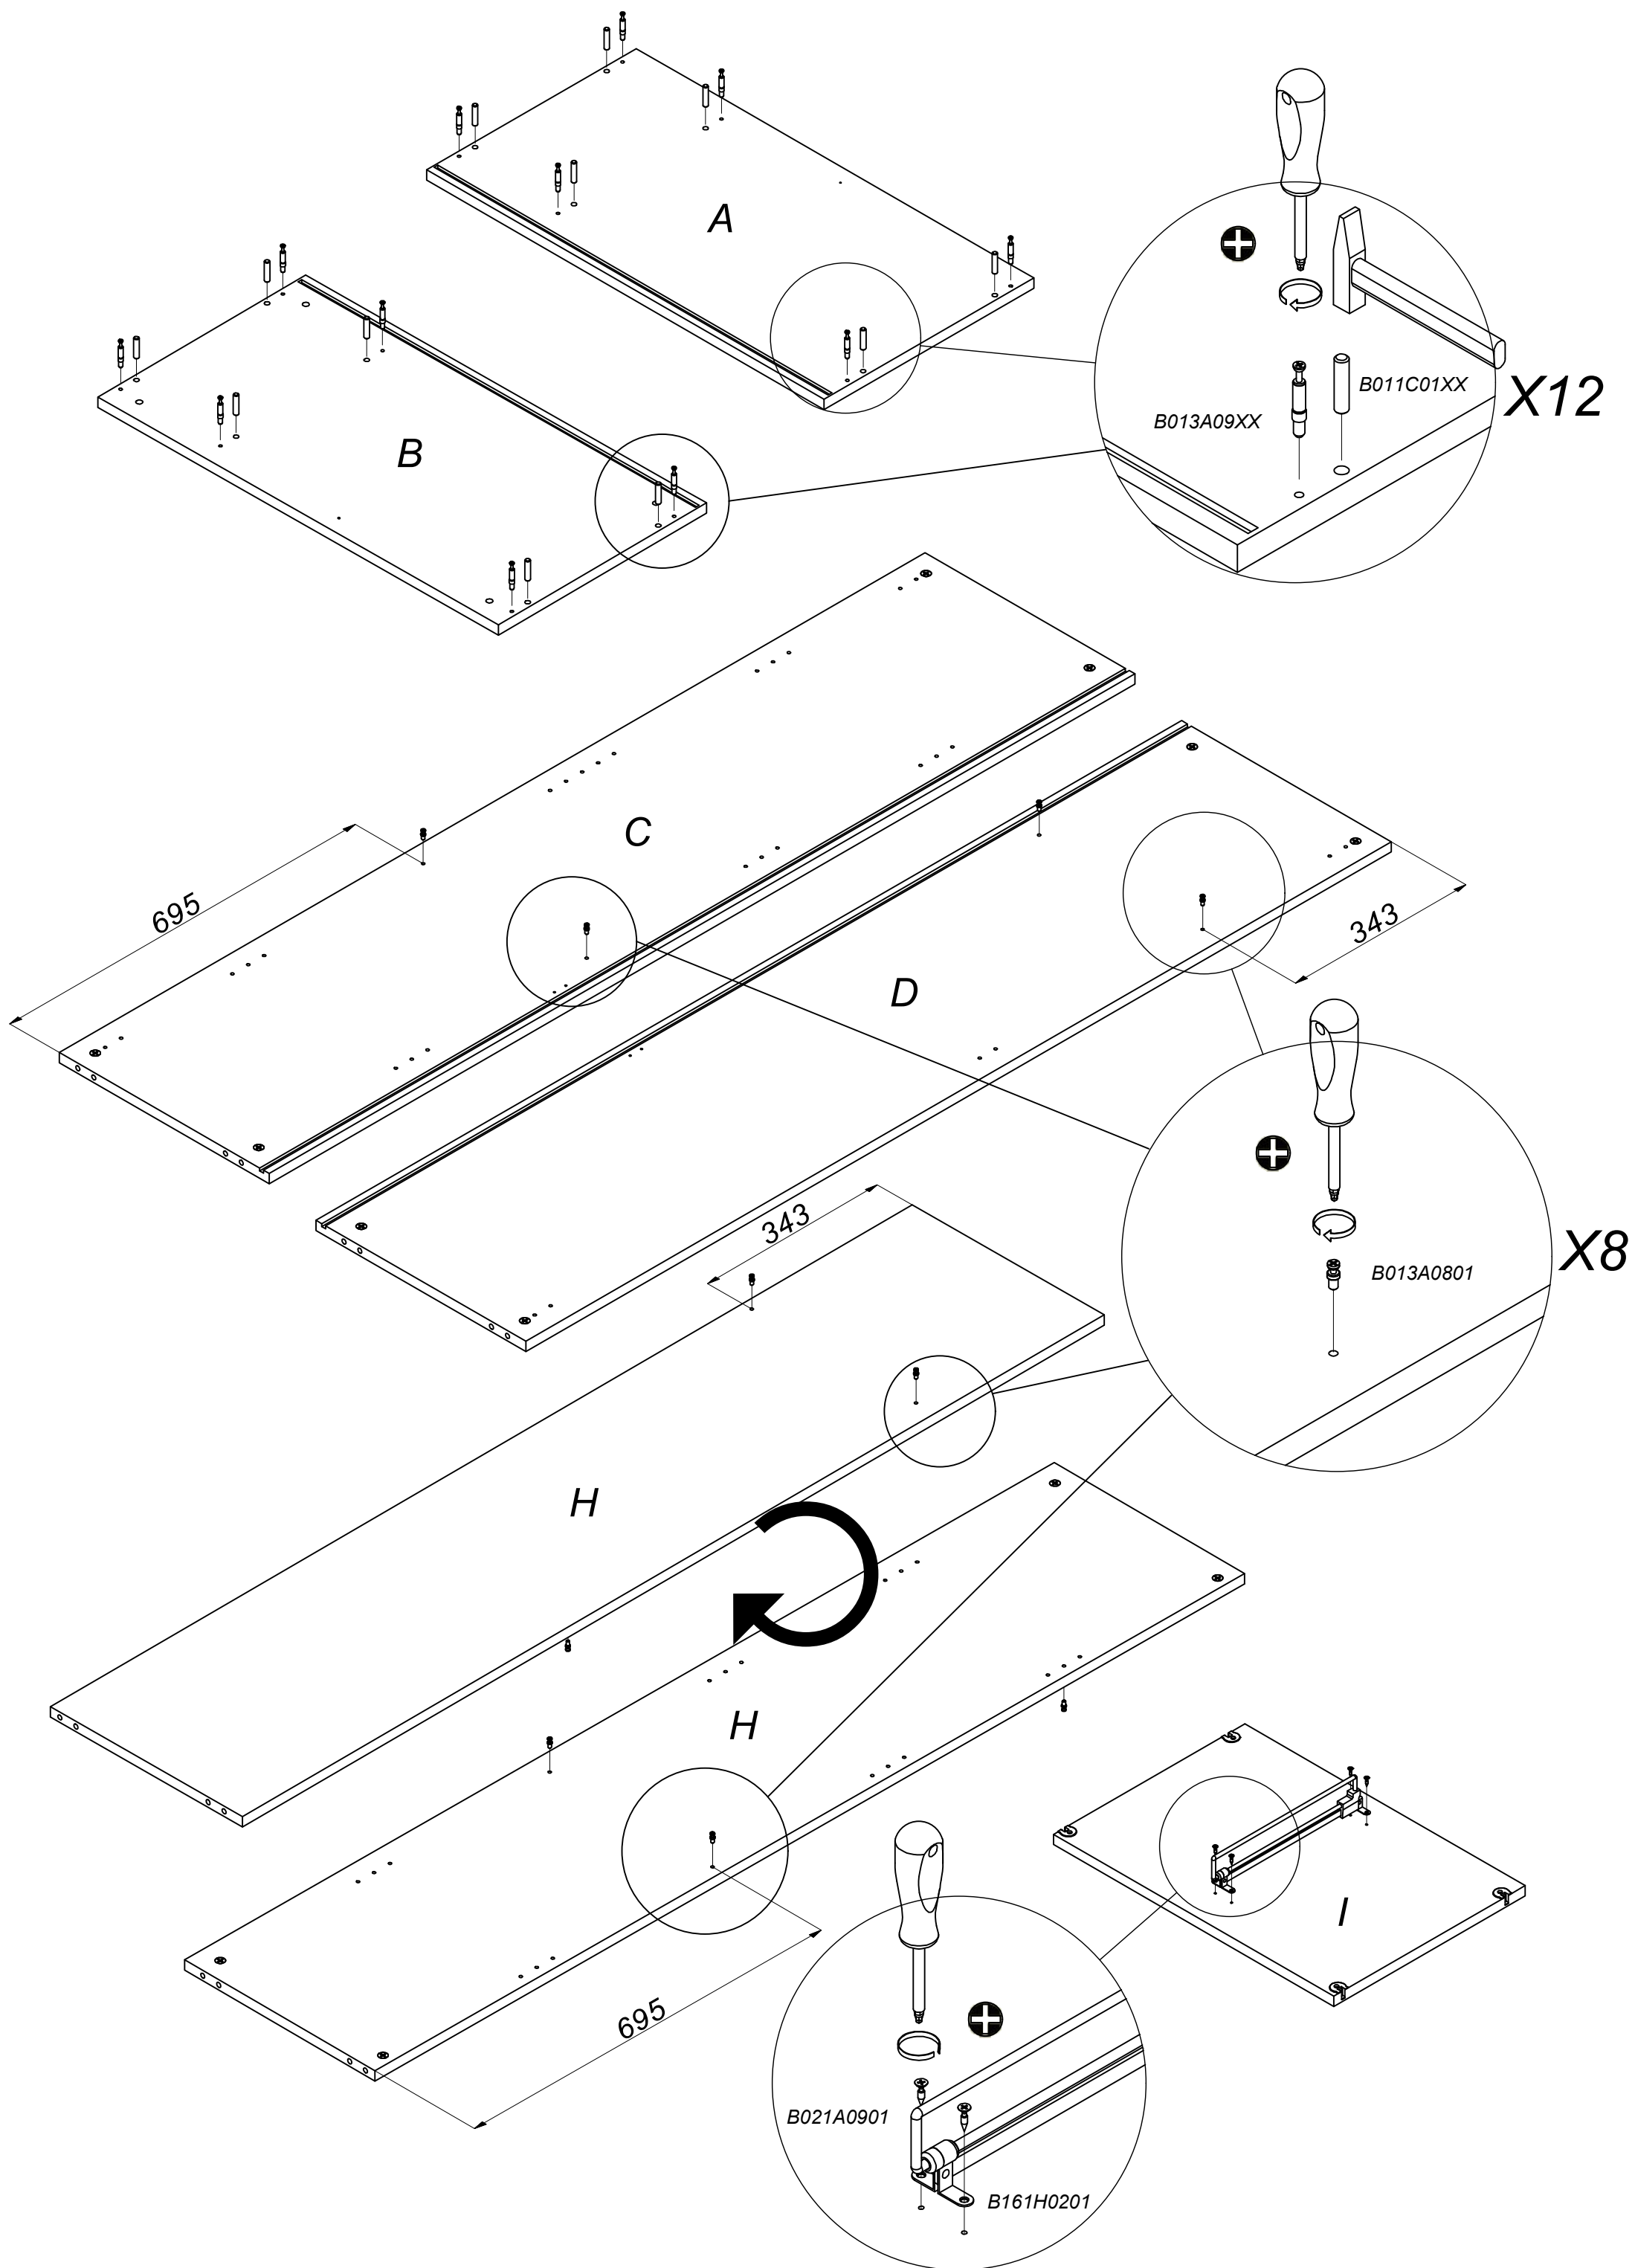

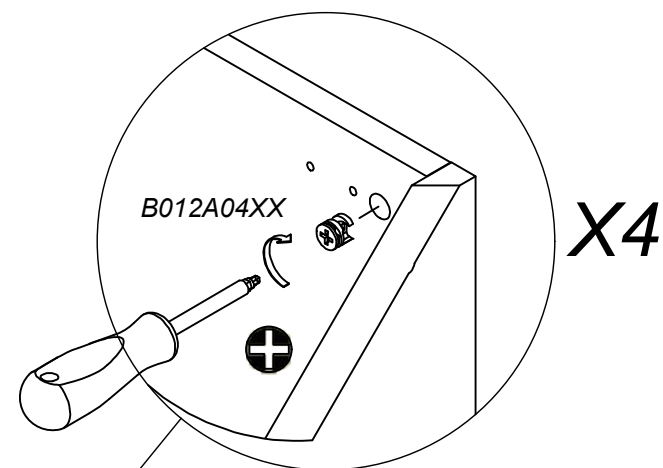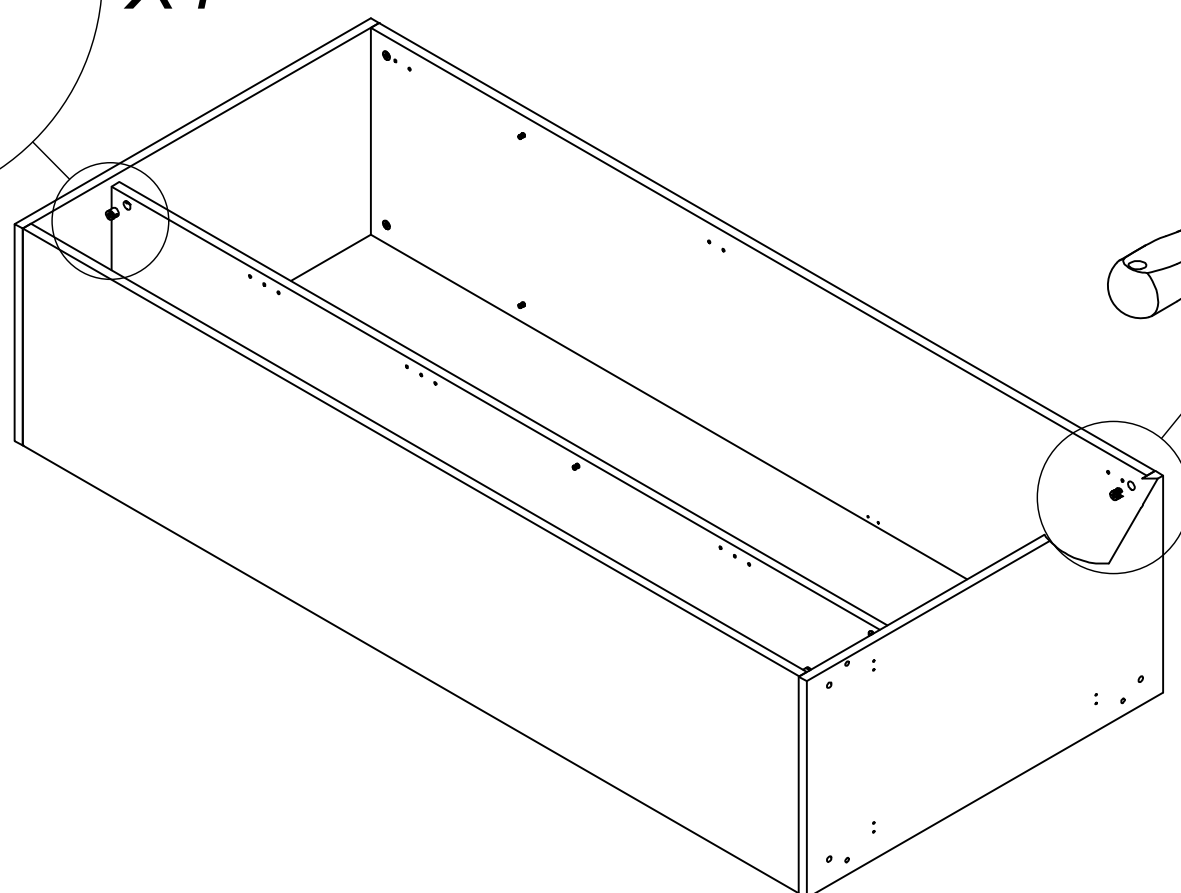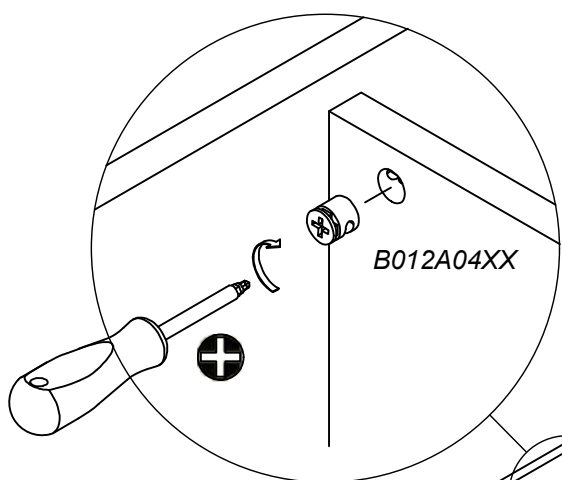
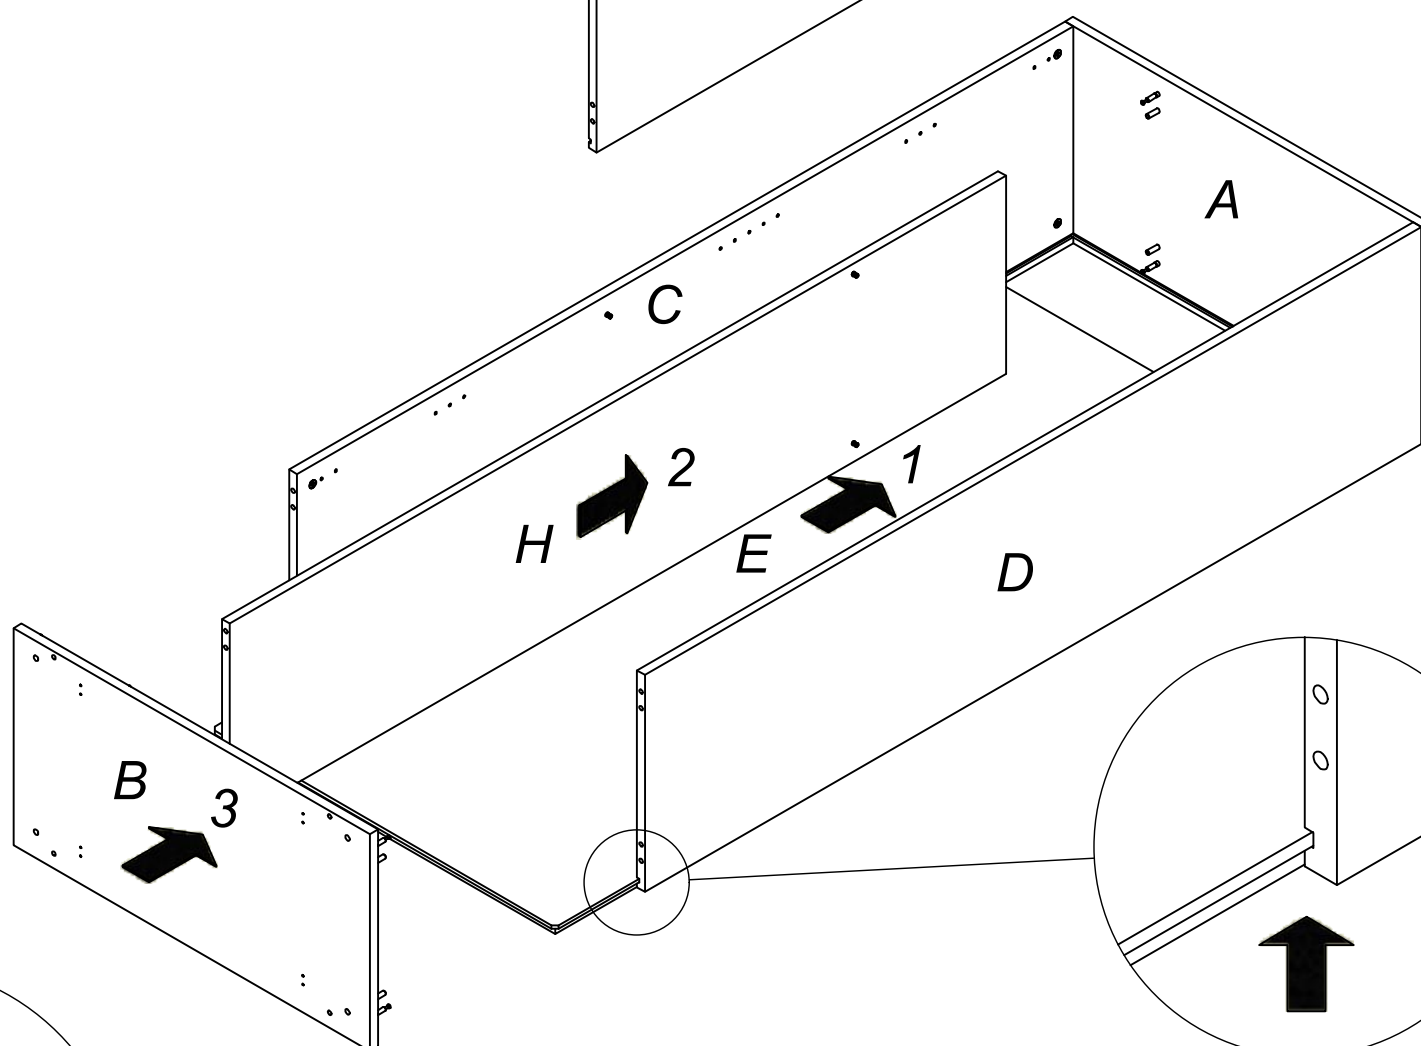
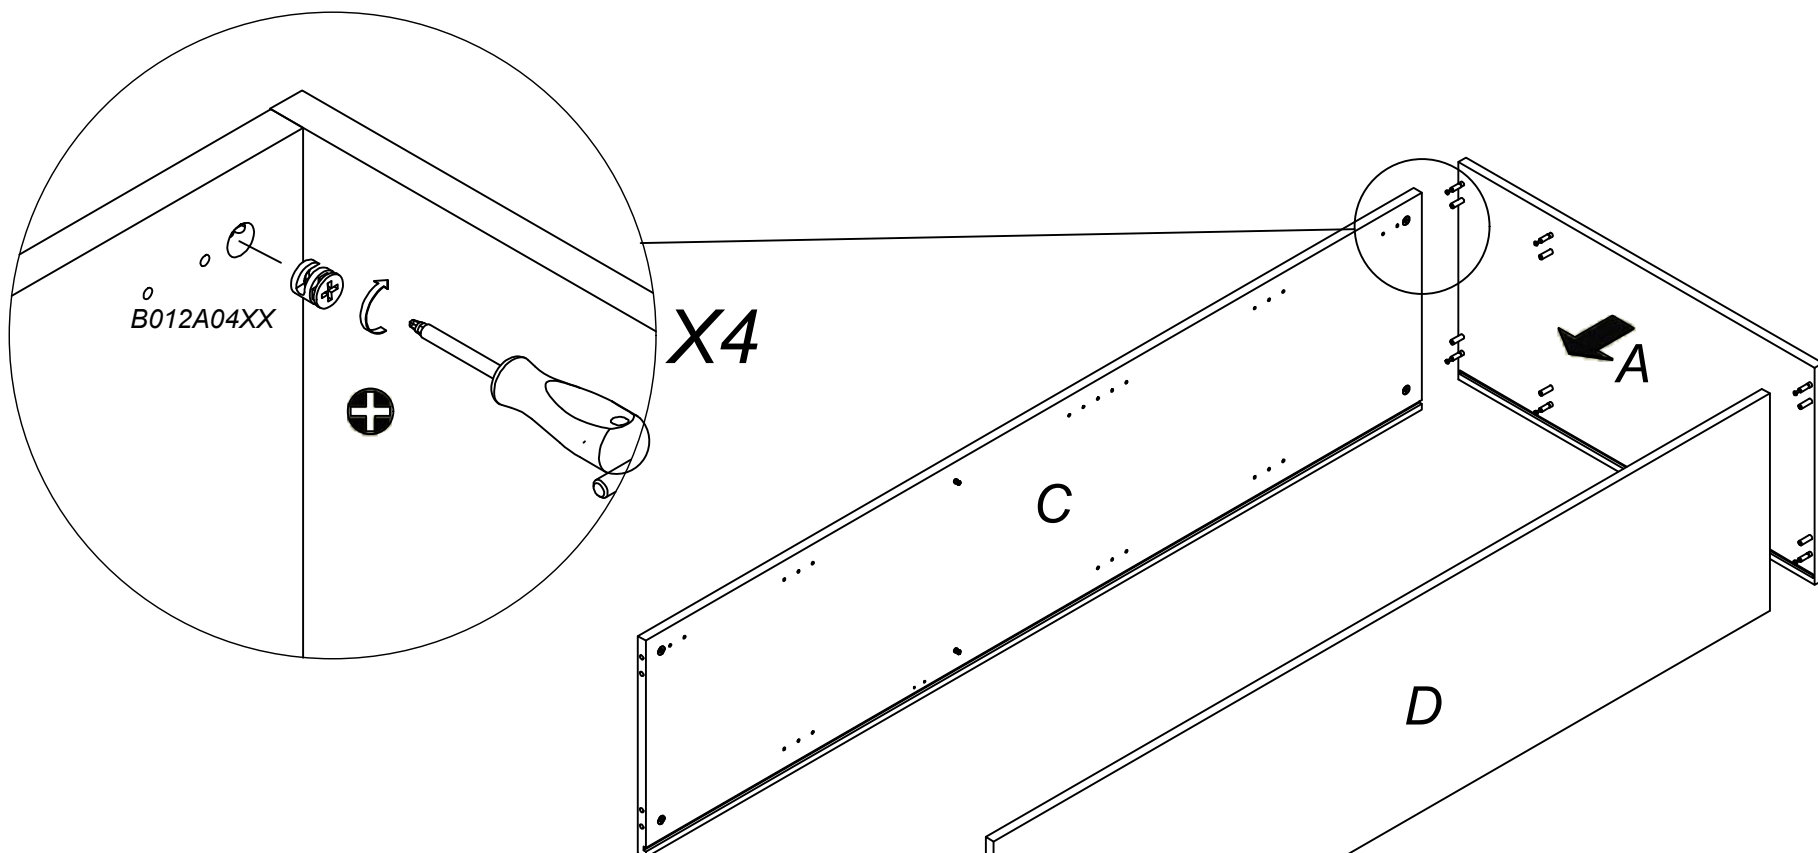


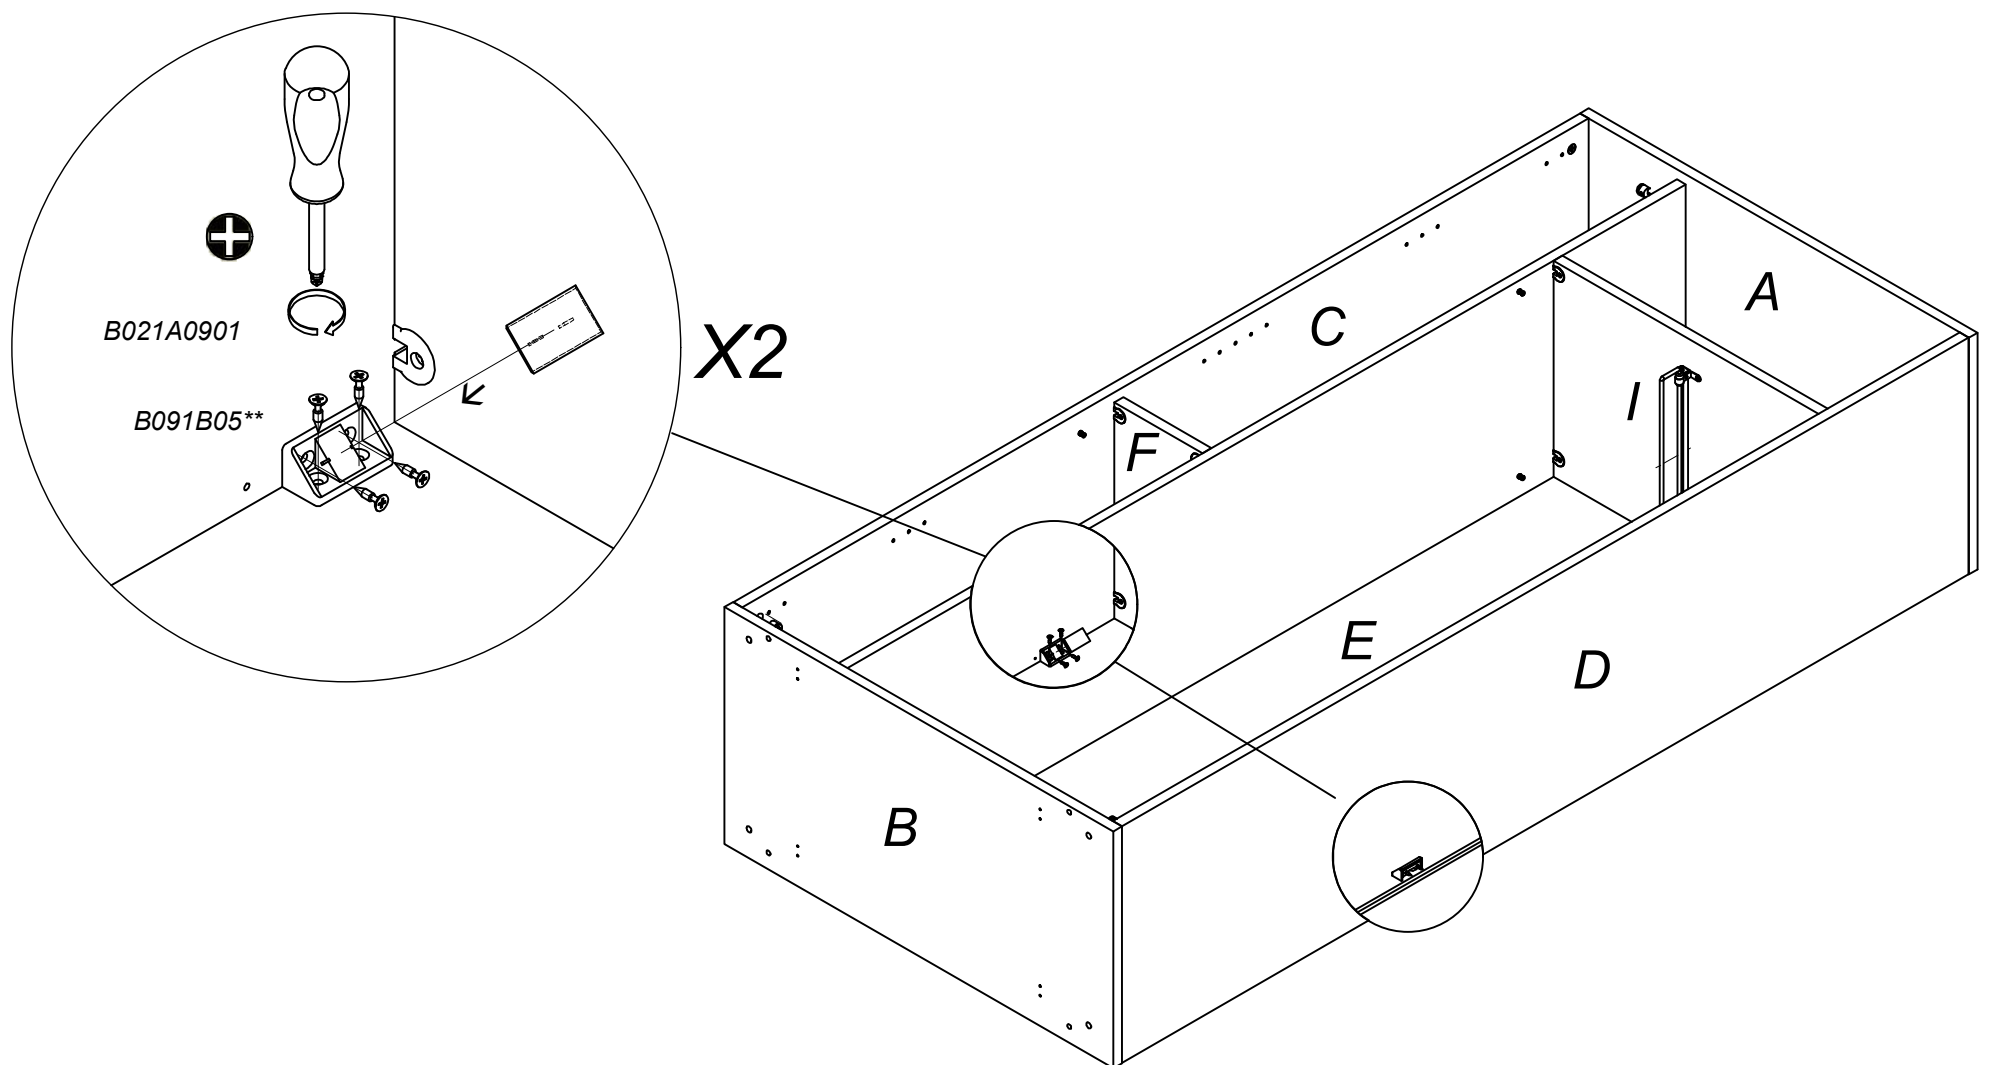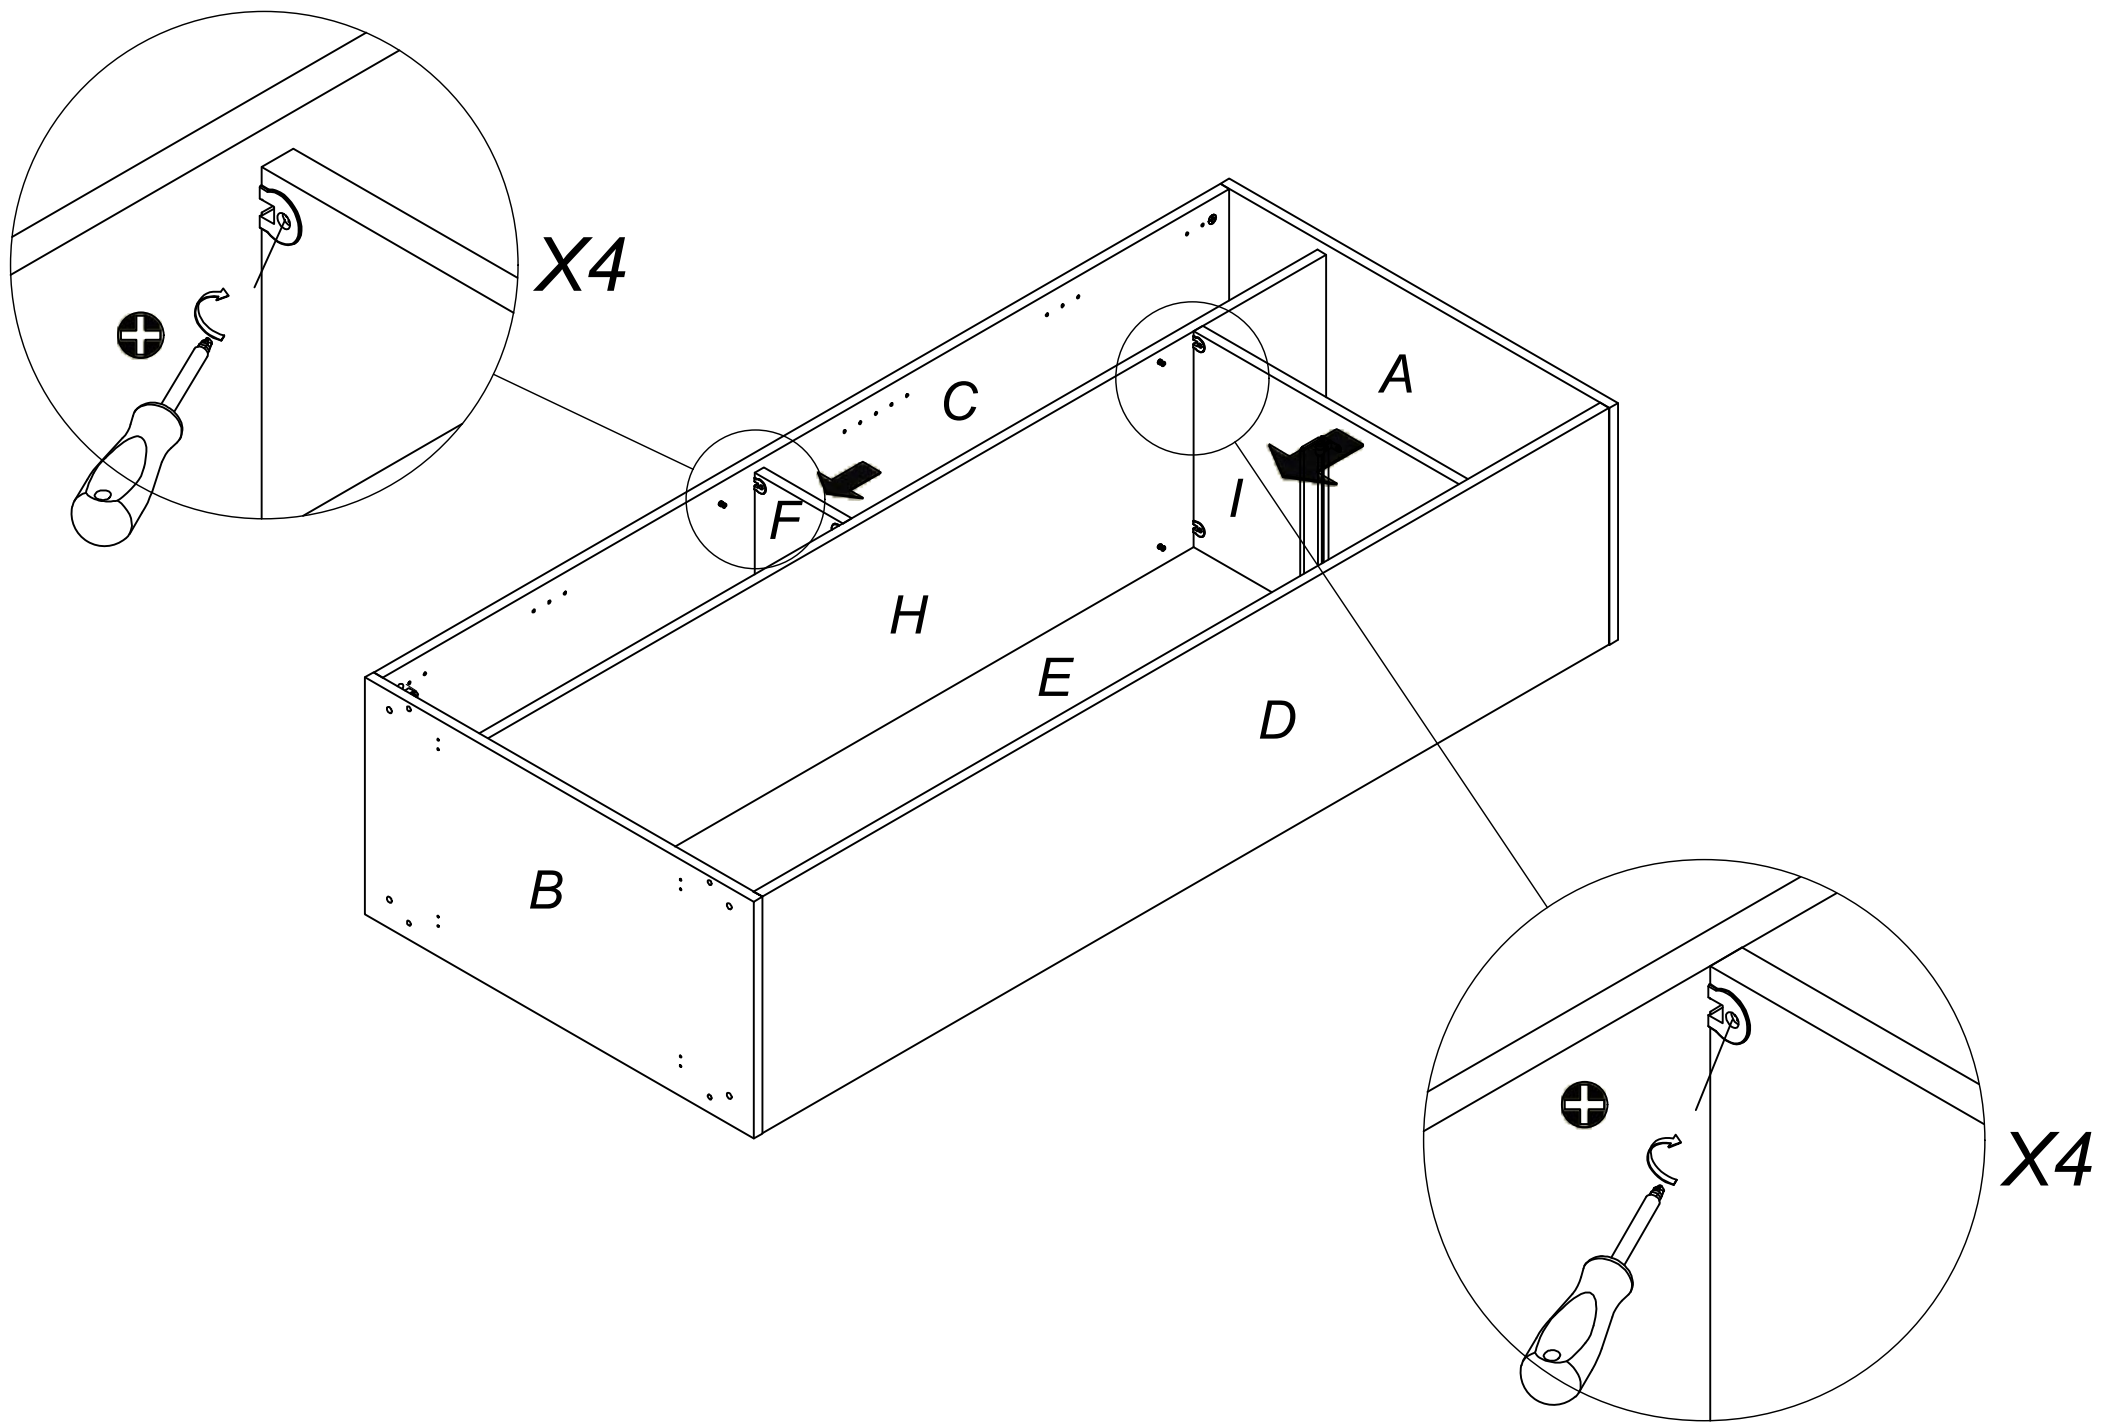

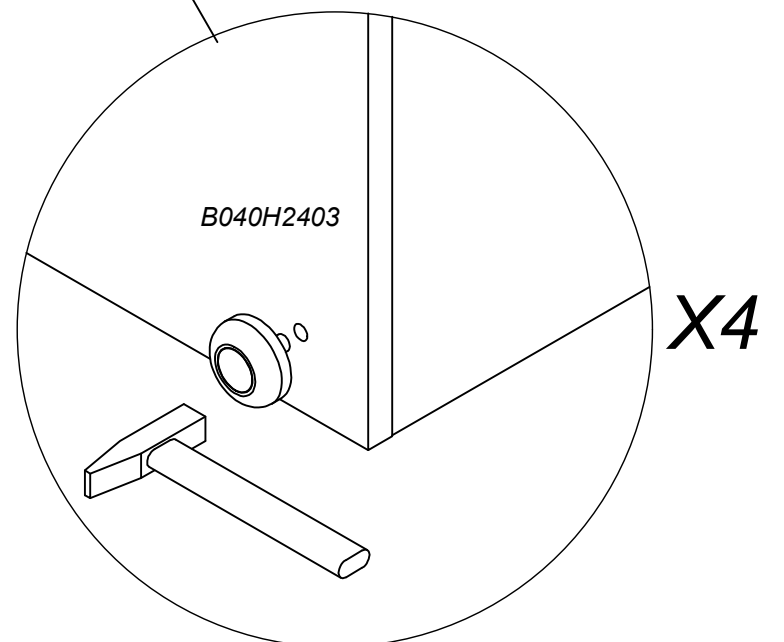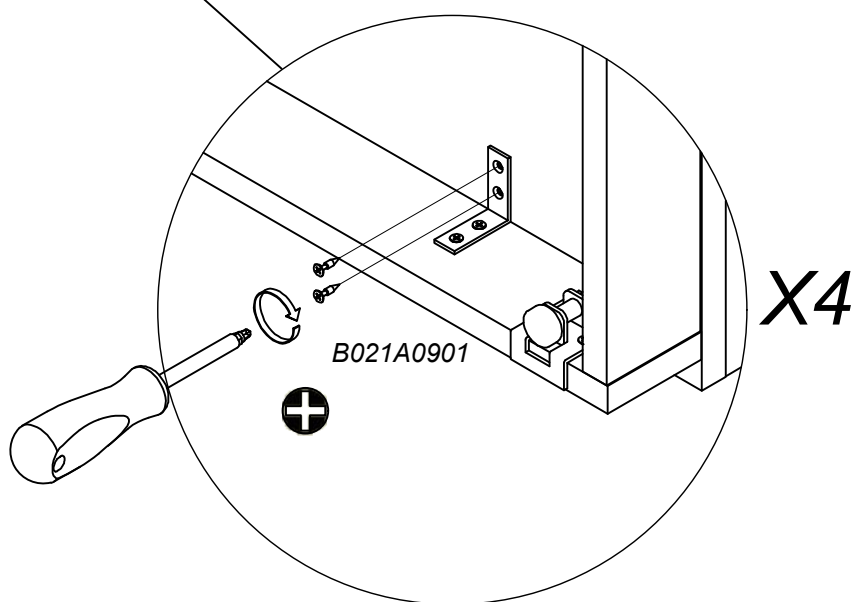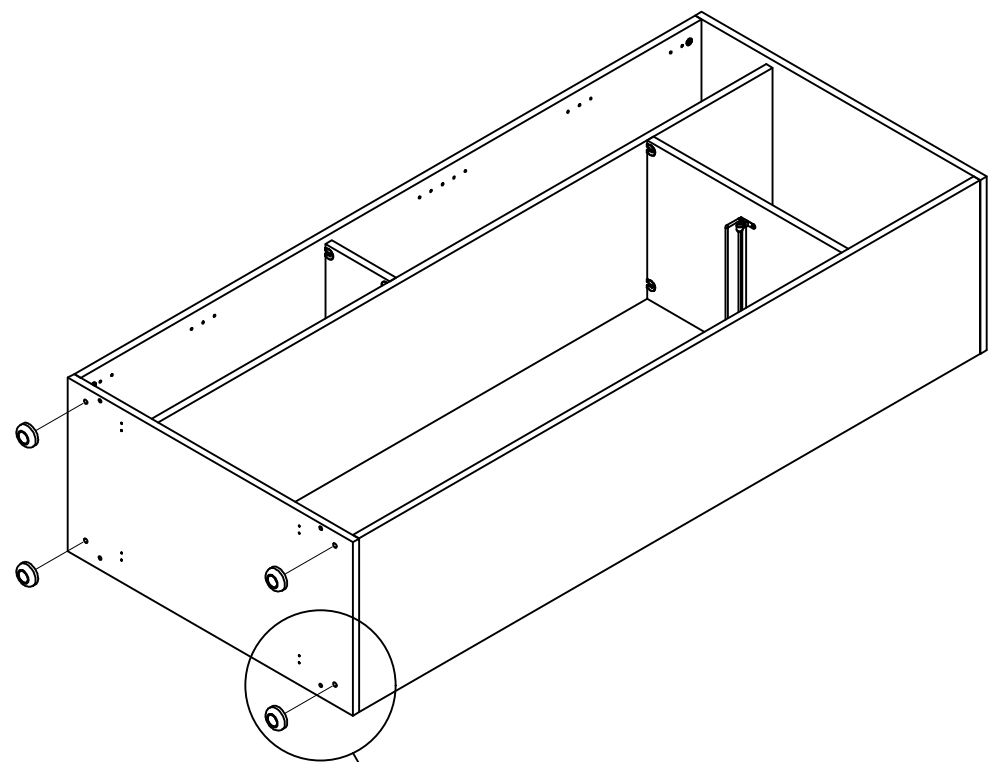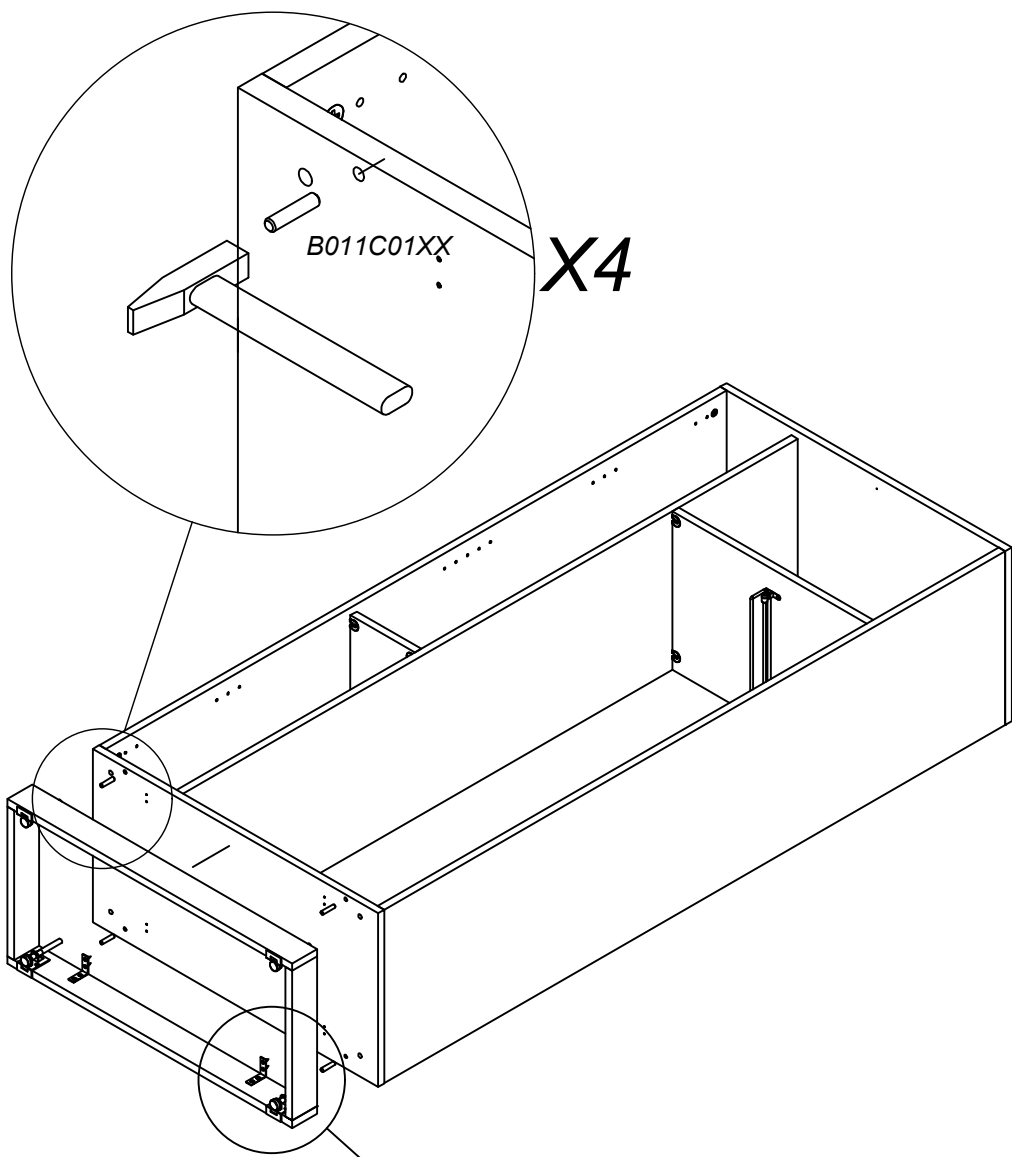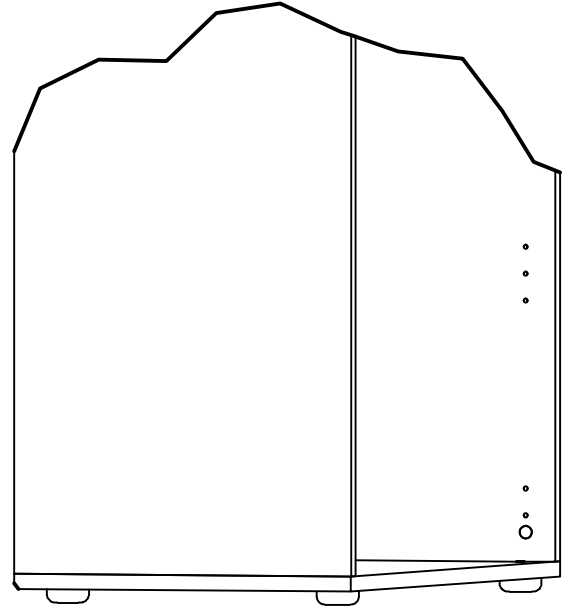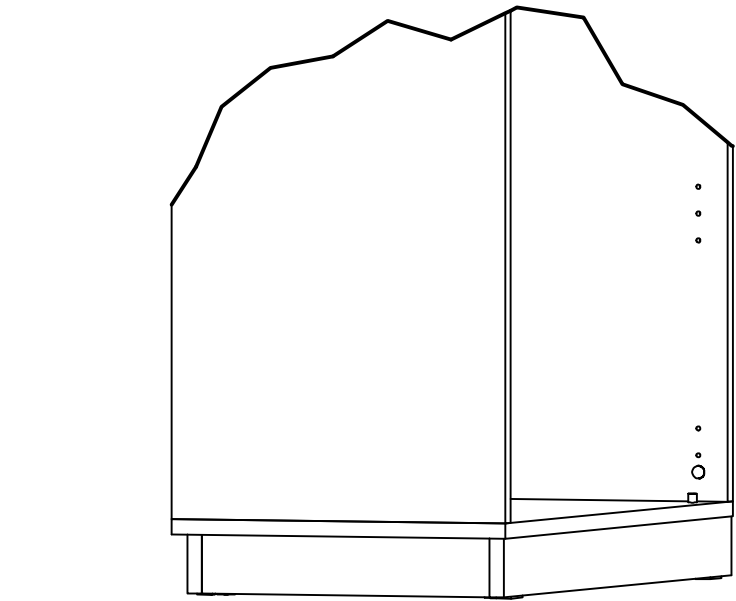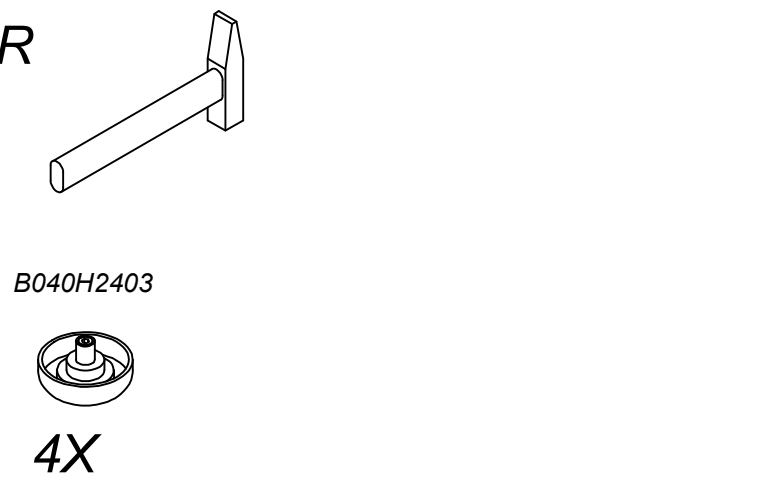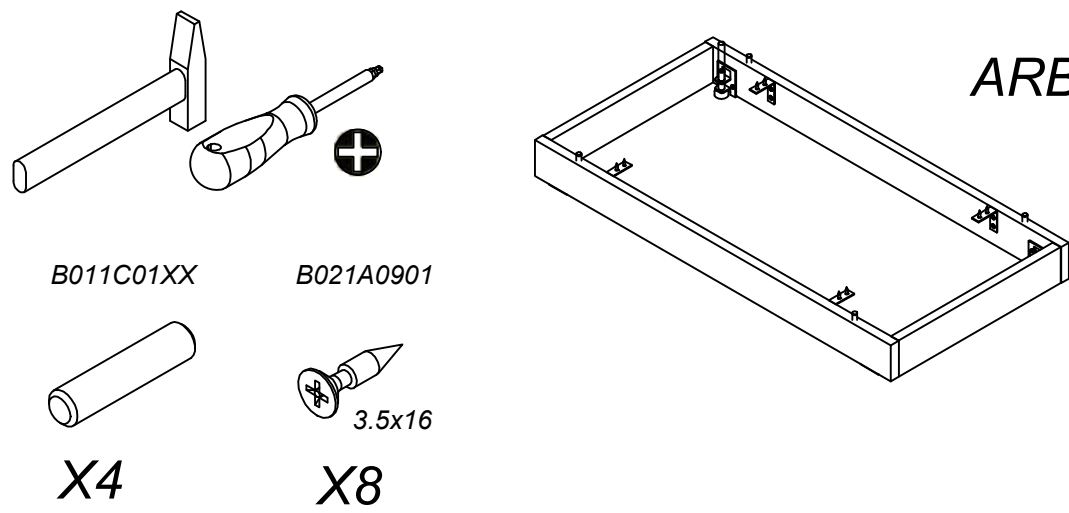


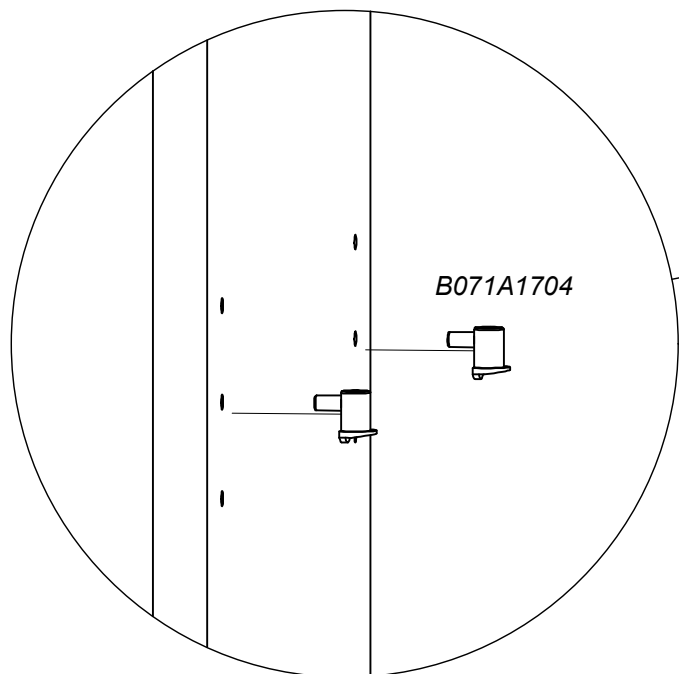


X12

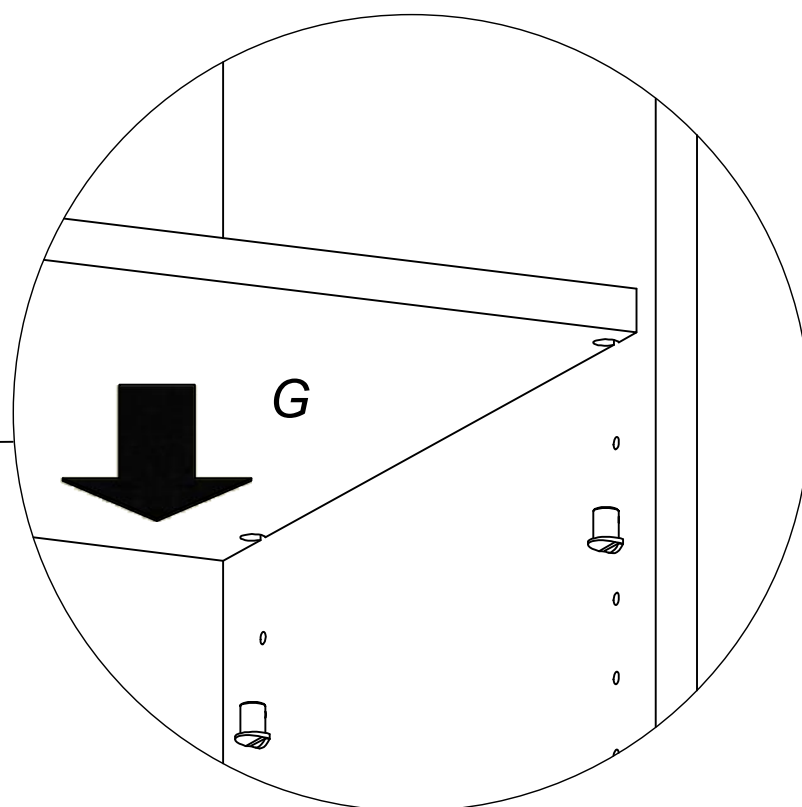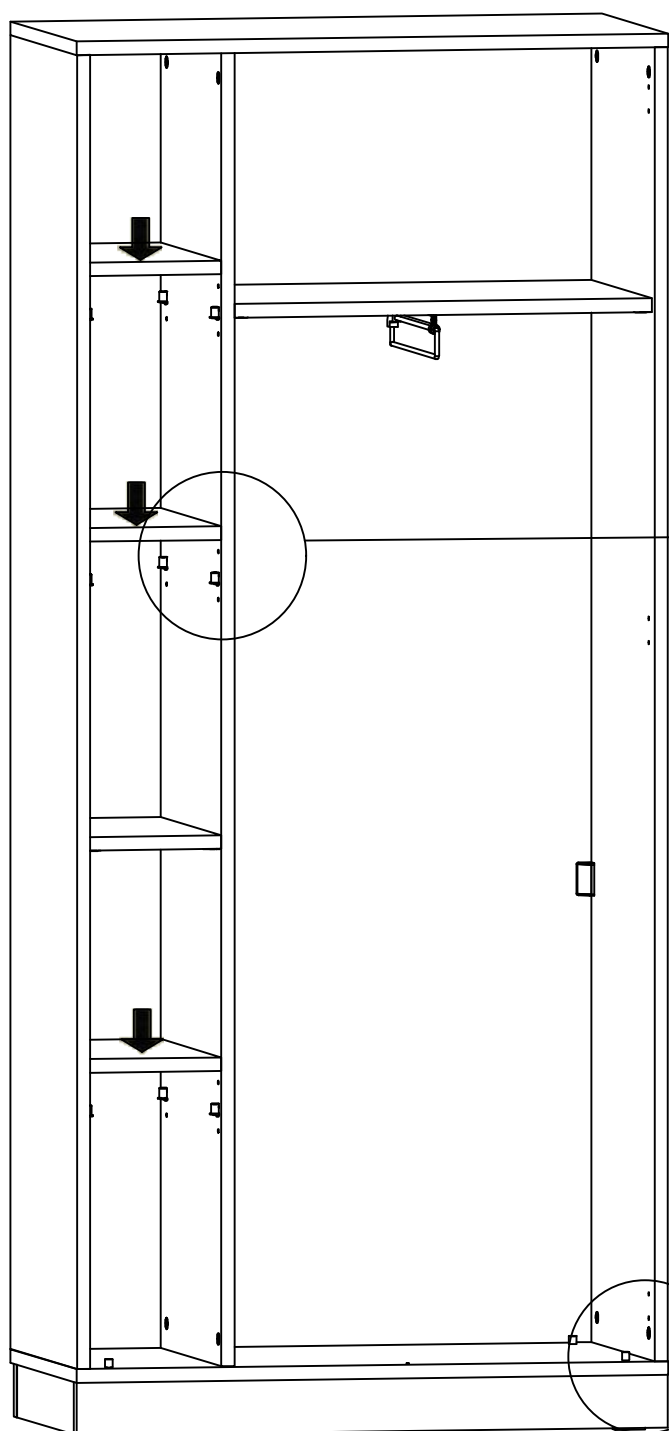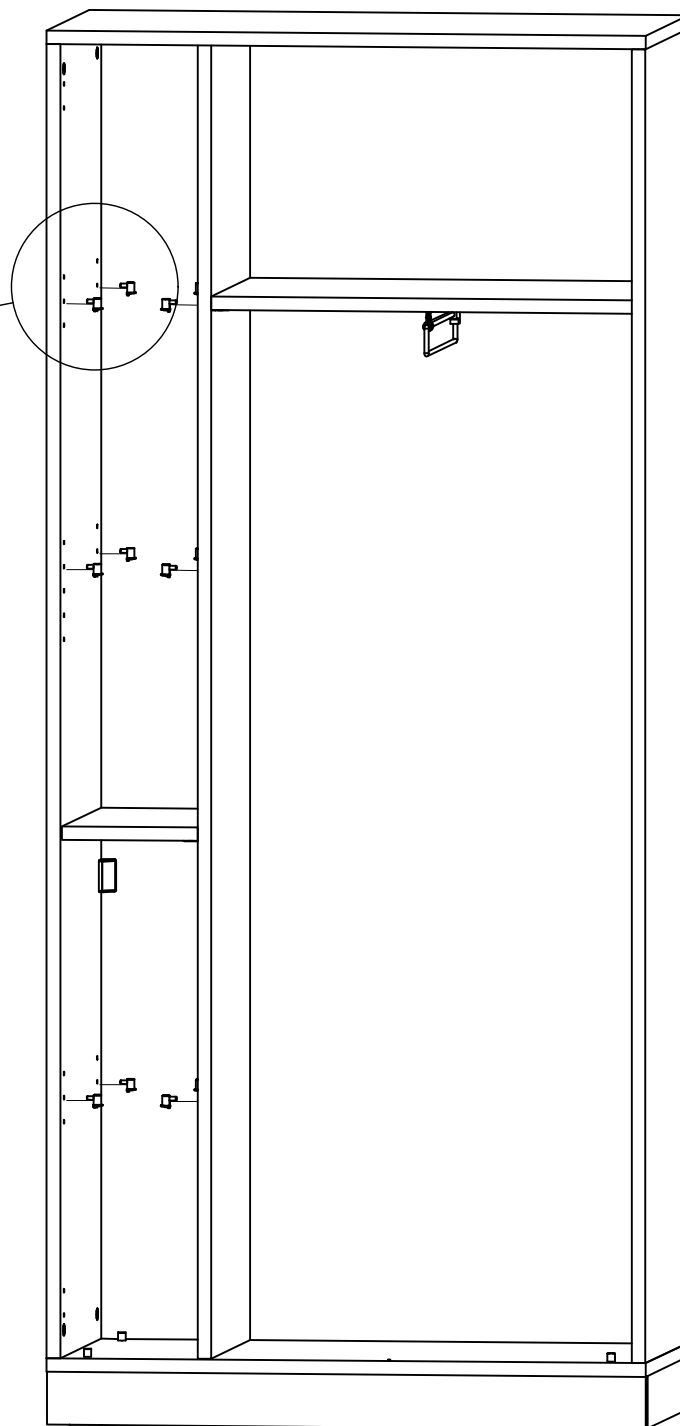


X3

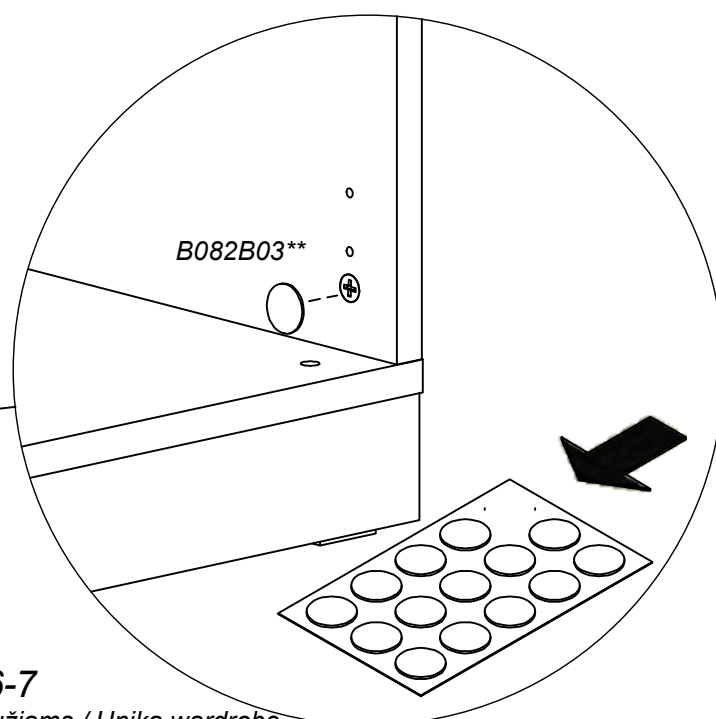

X12

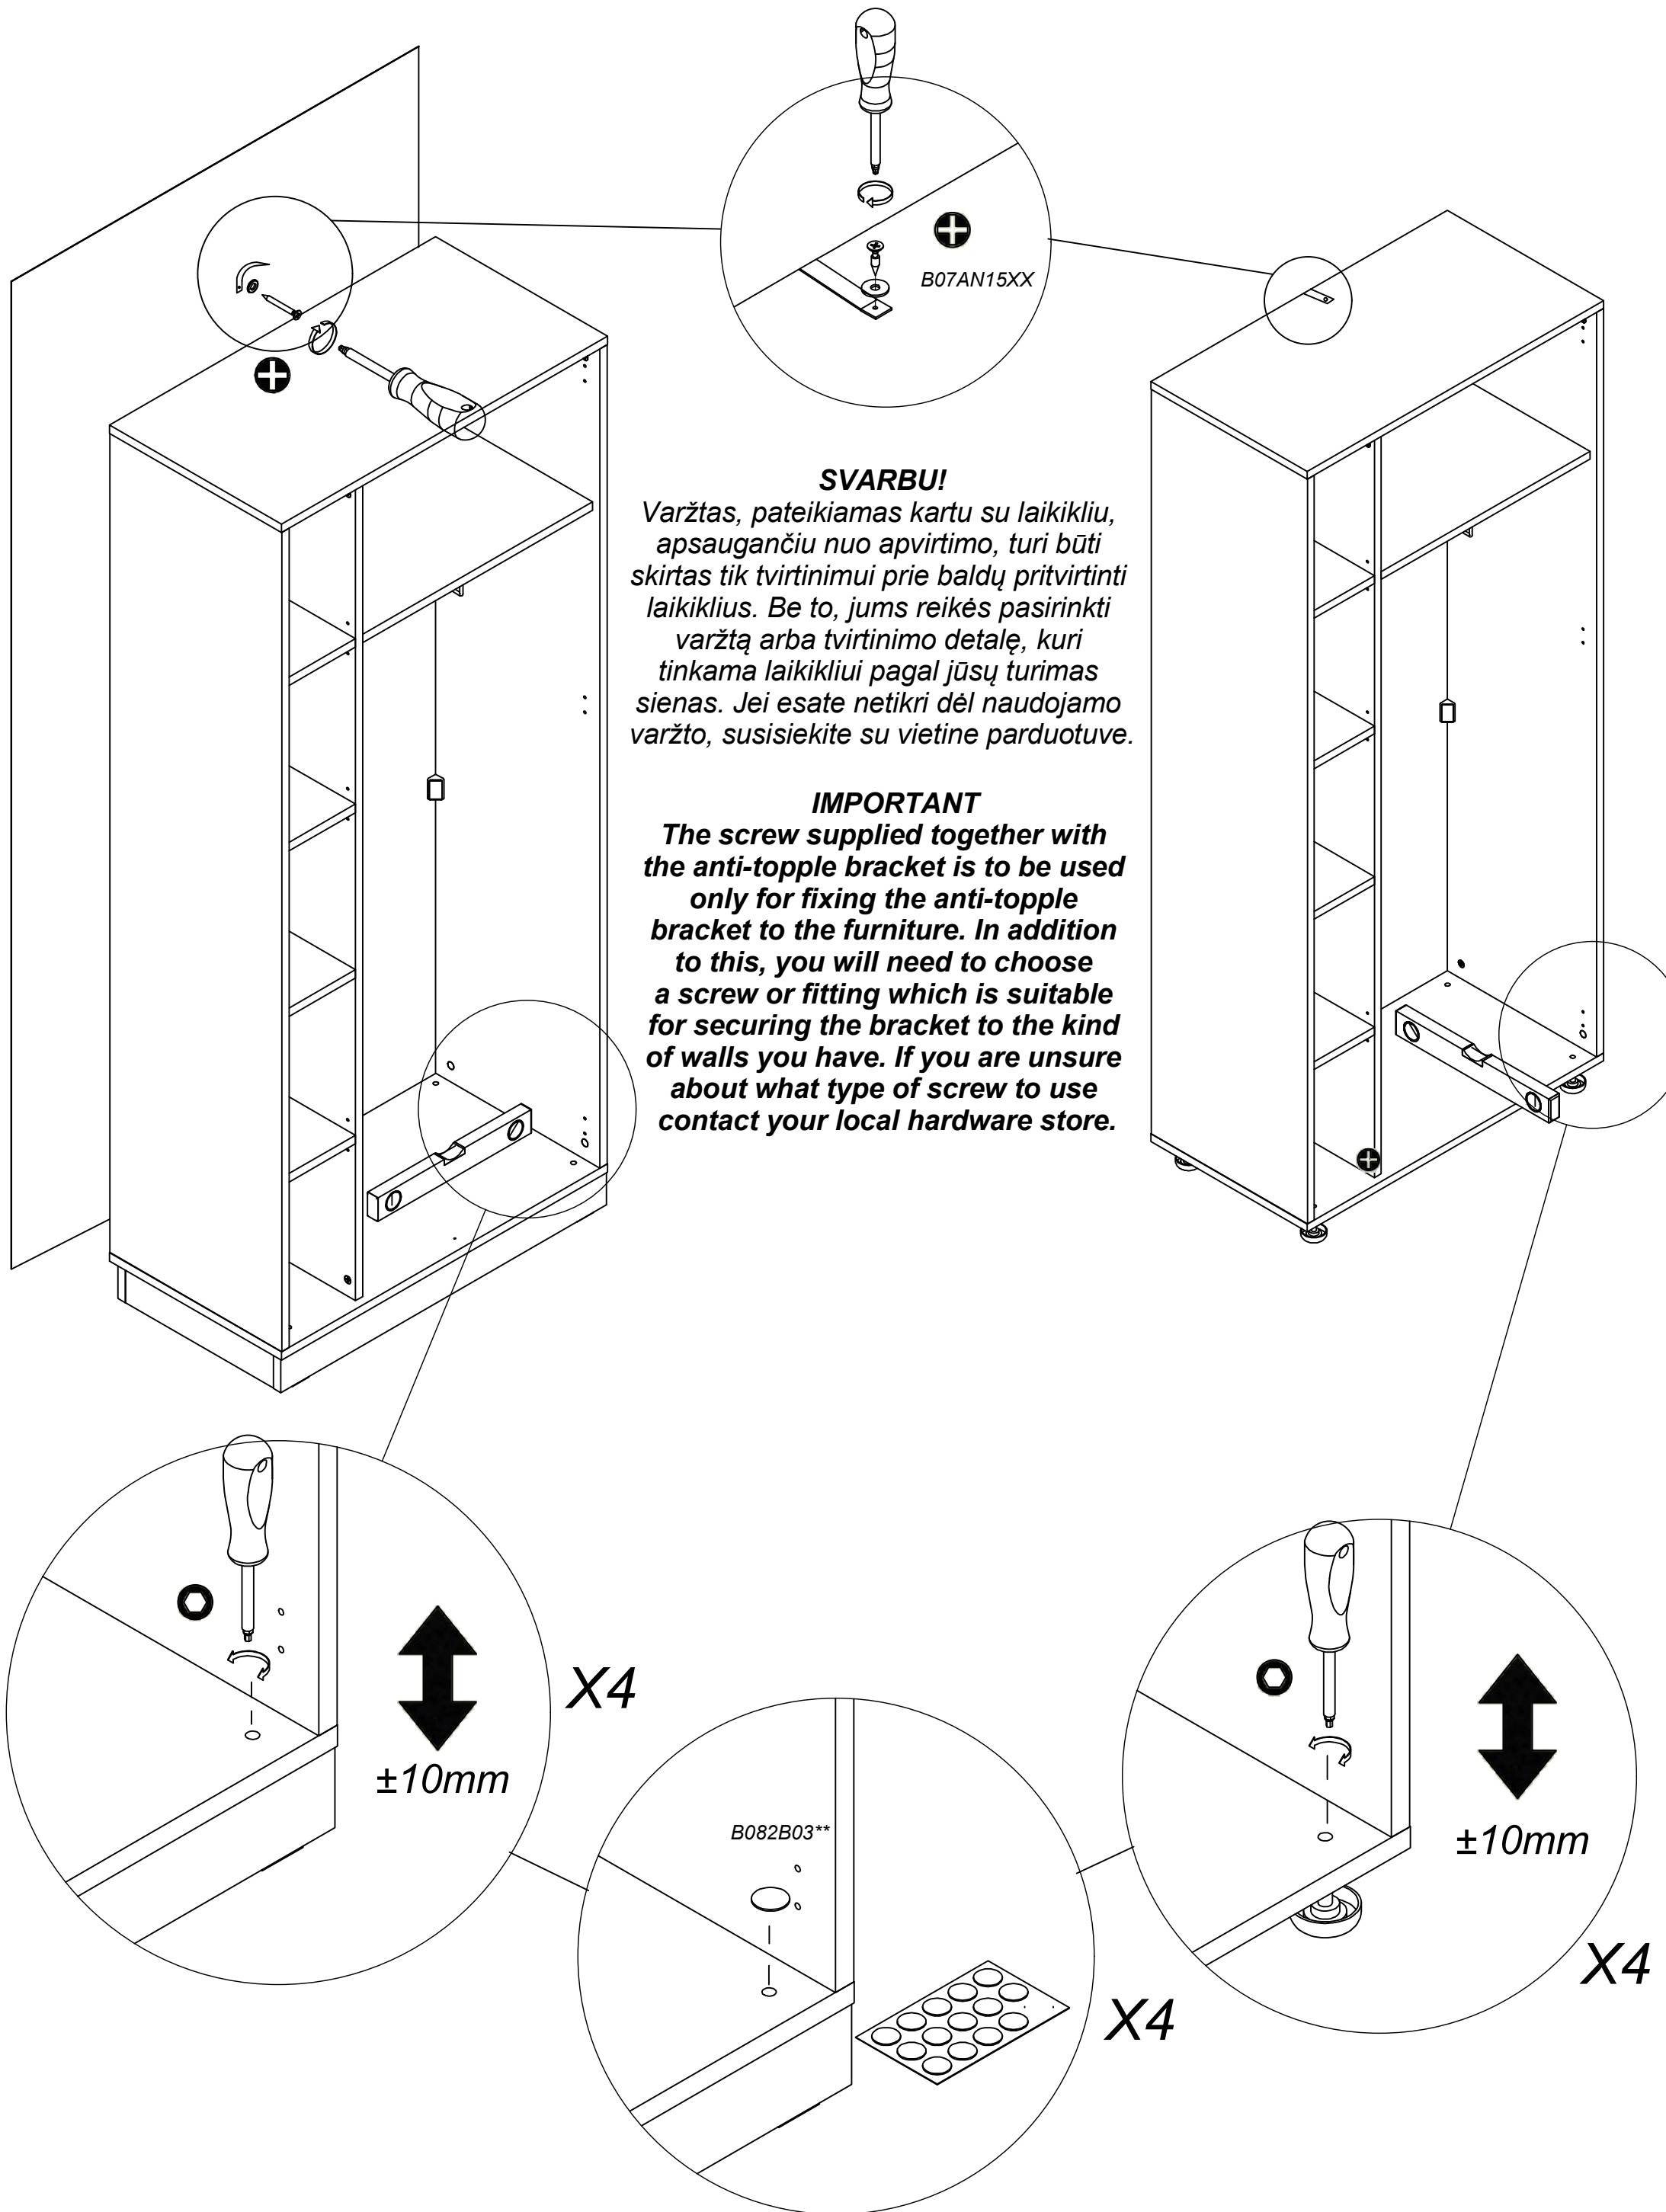

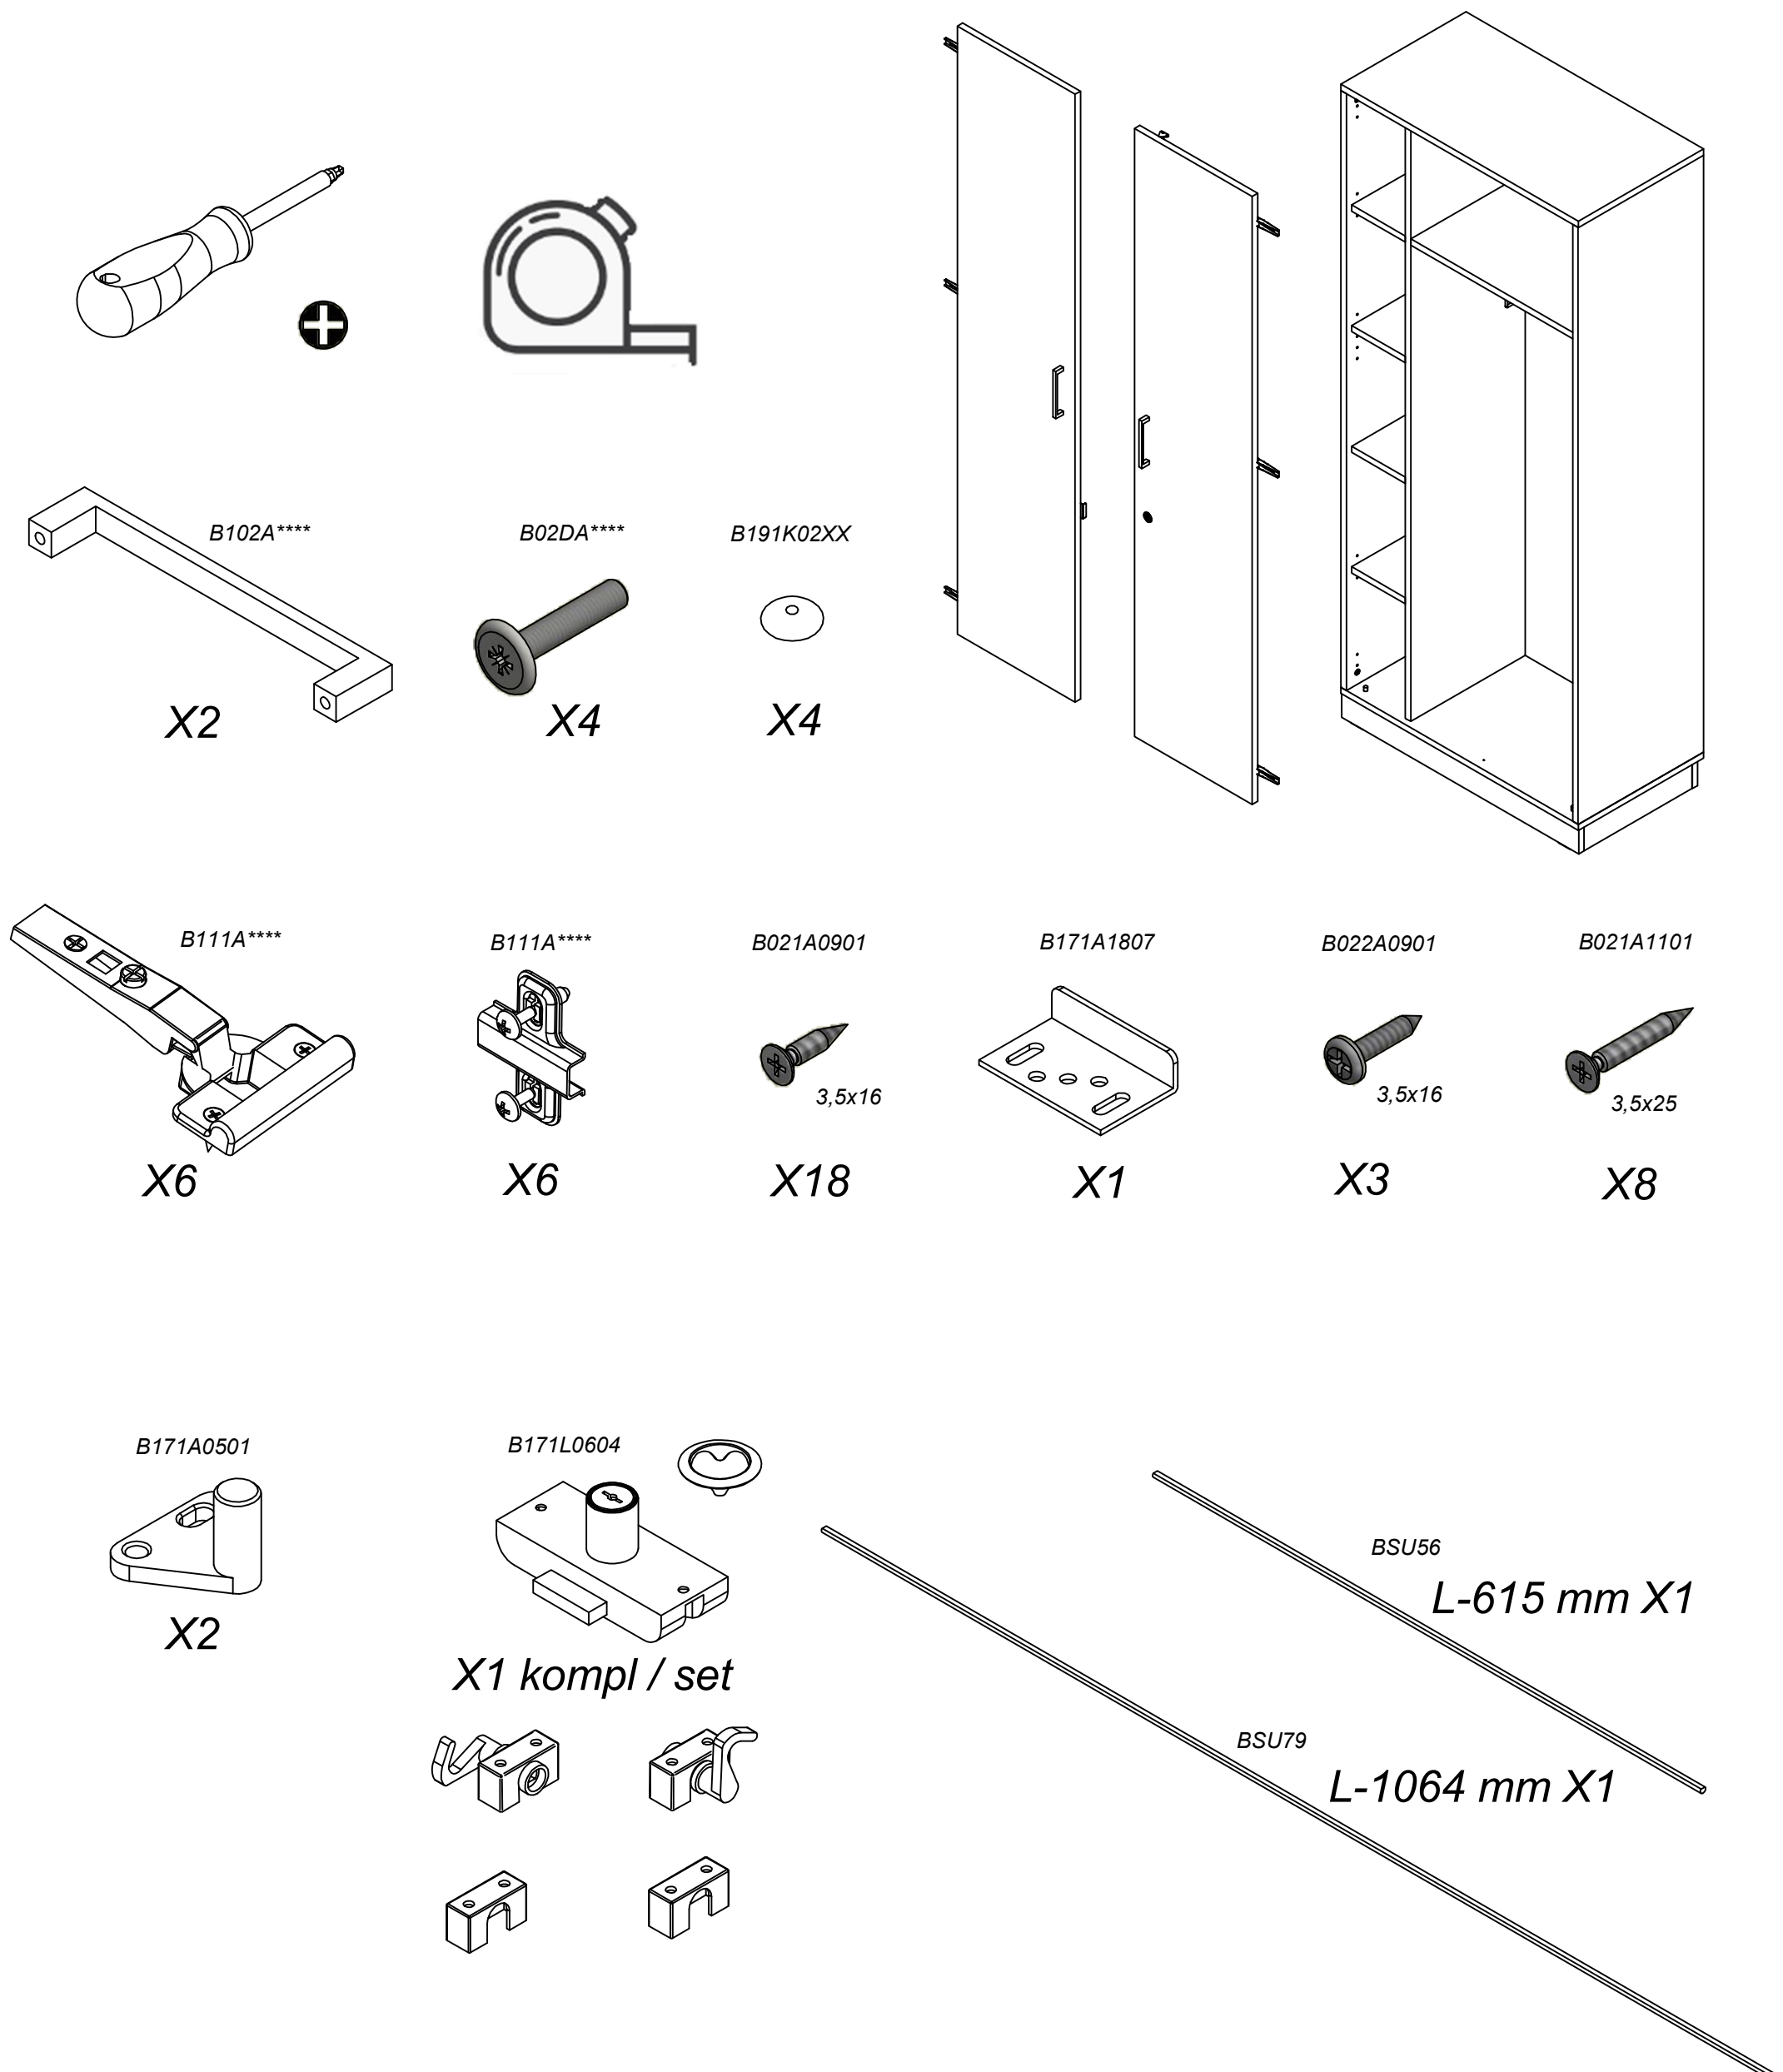

Svarbu! Prieš renkant spintą su durelėmis, spintos korpusas turi būti pritvirtintas prie sienos!
Important! Before assembling a cabinet with a door, the body must be fixed to a wall!

